

[Lonsdor K518ISE](#) Hibernation Function update instruction How to update Lonsdor K518ISE Hibernation Function?

Updated Device: Lonsdor K518

Updated Condition: for all K518 devices with working normally

Updated Content: Added Hibernation function; Kernel update supported


Updated Version: [K518 APK V1.5.25](#)



Preparation for Update:

1. Power on the device or keep the battery level over 80%.
2. Make sure wifi network is in good condition and the device receives signal normally;


Update steps:

1. Click [One key update] and skip to below interface. Then click the first button to update system. When the update complete, click [OK] to reboot the device.

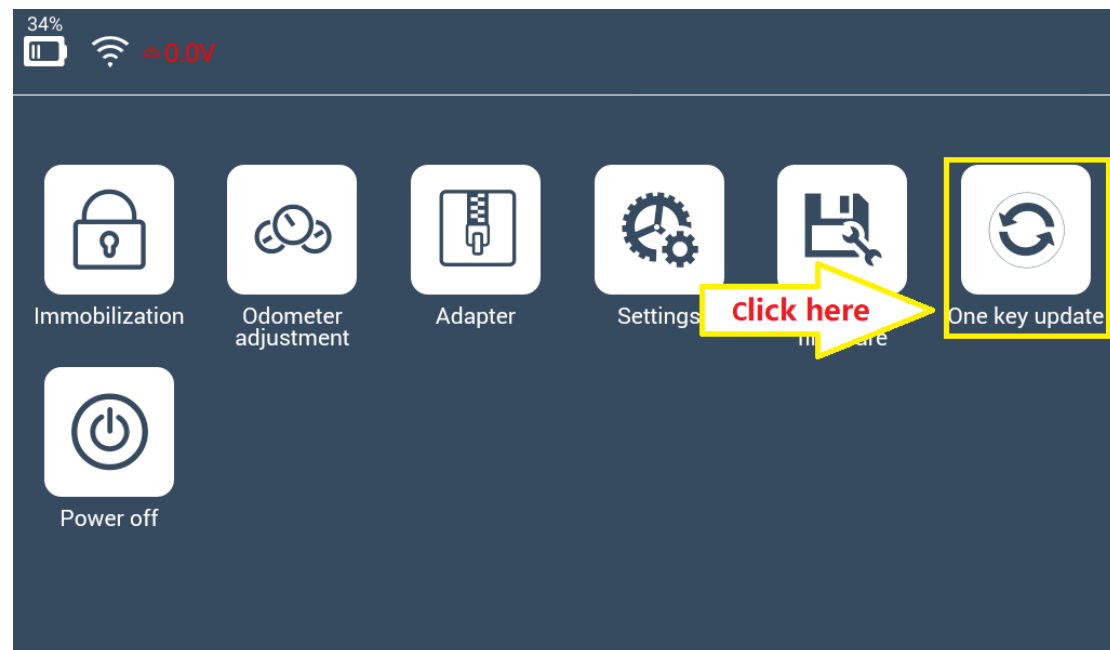


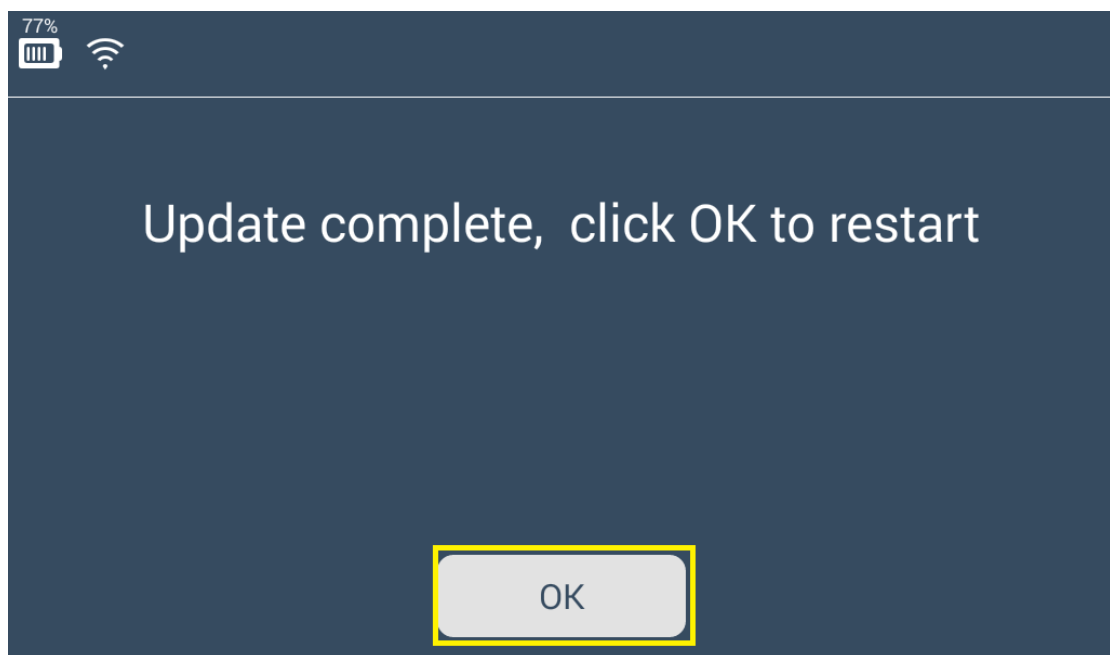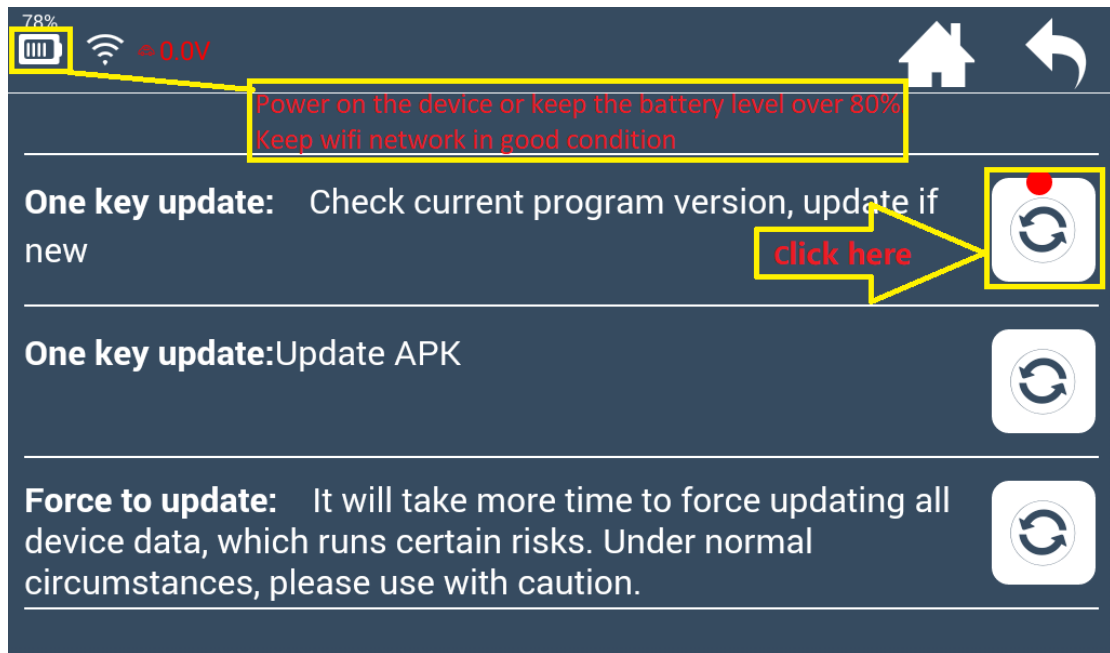


2. After rebooting, click and enter [Settings] menu, you will find there are two additional function buttons: [Update Kernel] and [Display Settings].

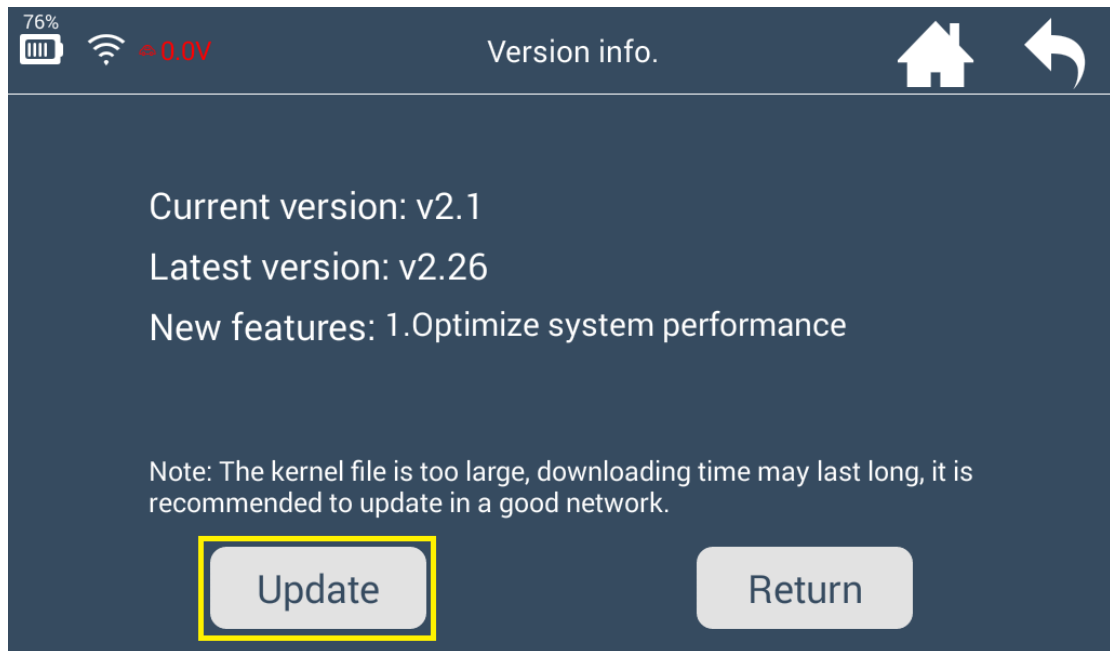


4. Click [[Install](#)] after updating the kernel file. And the device will reboot to install kernel.

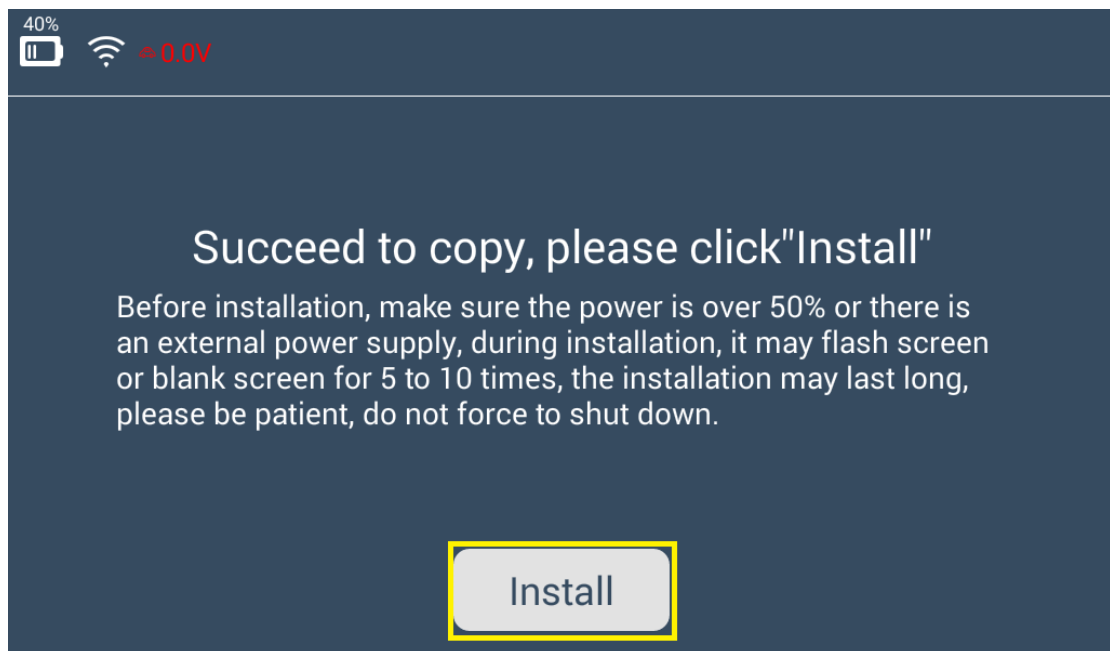


5. Blank screen is normal during the installation. The whole process will take 5 minutes, be patient to wait and don't restart the device manually.

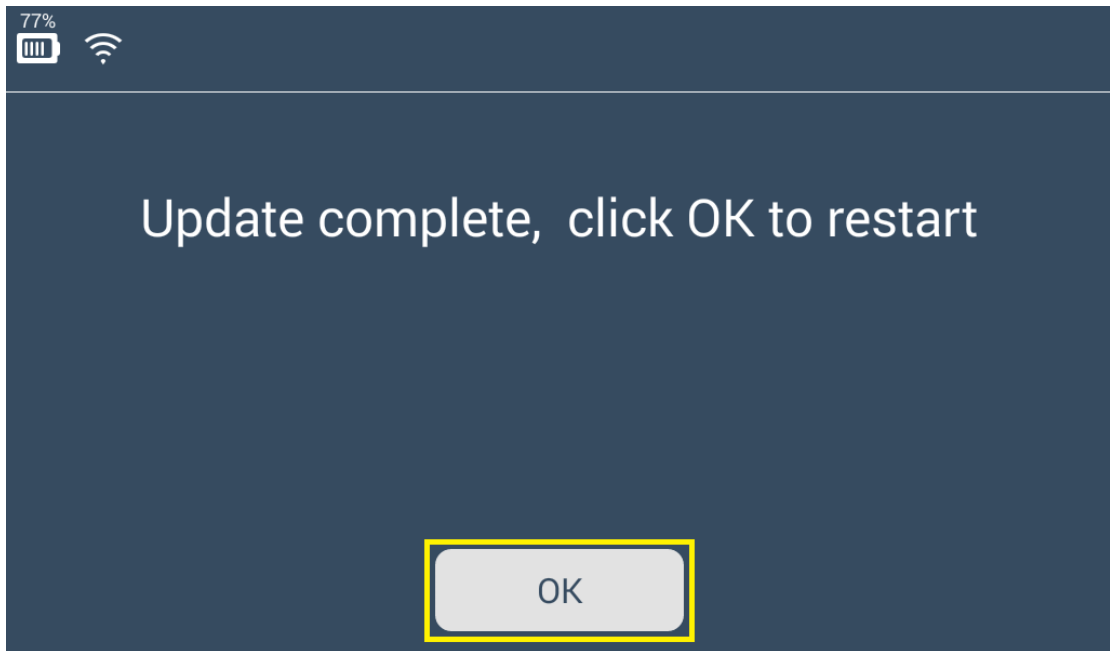

6. The update complete when the password input interface appears. Screen auto-lock in the [Display Settings] is added.

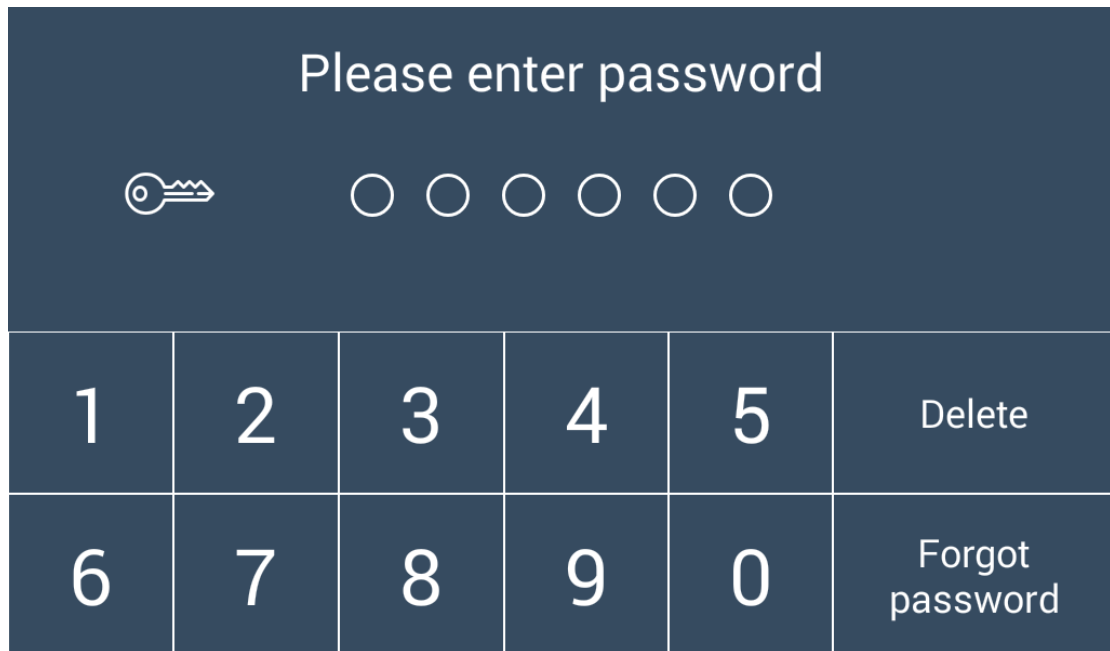

7. Enter [Settings]→[Display Settings] to adjust the screen brightness and screen auto-locking time .

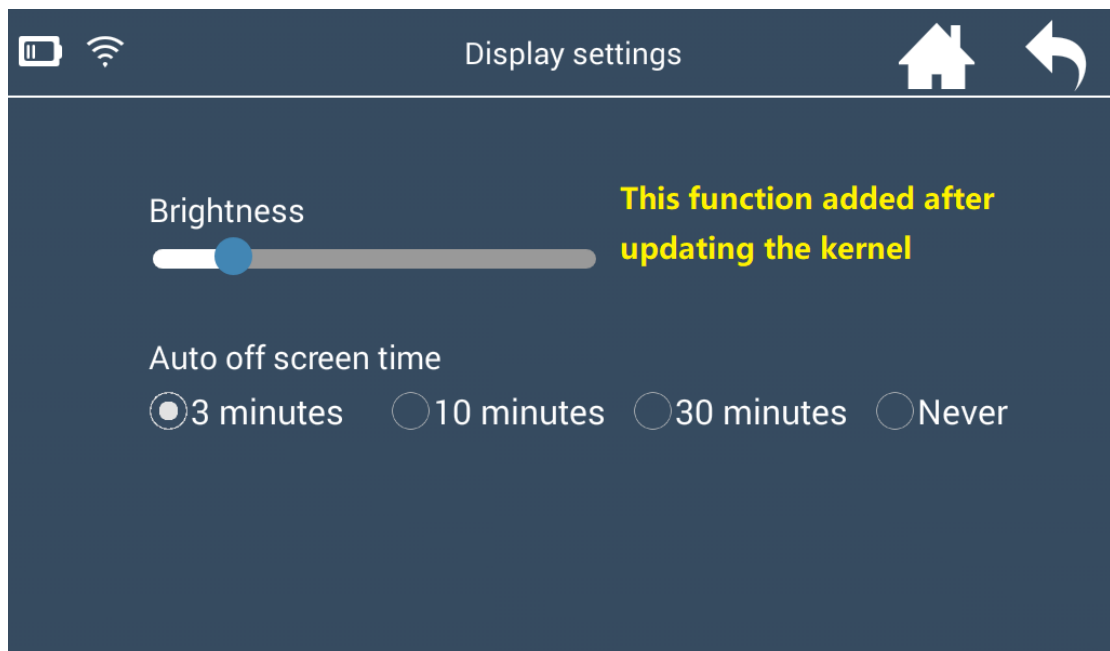

8. The benefits for update: Save power to prolong stand-by time. Auto standby function can prevent the device from being overheated in hot summer.

<http://www.obdexpress.co.uk/wholesale/lonsdor-k518ise-key-programmer.html>