

Yanhua Mini ACDP read write DME ISN newest list + how to do?

Enter PC- [ACDP software](#) (Using computer, you can also run with one mobile phone).

Click on "BMW", then "DME ISN".





1. OBD /CAN Mode Read /Write ISN:

Read /Write N55 DME ISN (Supports F Chassis)

Read /Write N20 DME ISN (Supports F Chassis)

Read /Write N13 DME ISN (Supports F Chassis)

Read /Write S63TU DME ISN (Supports F Chassis)

Read /Write N63TU DME ISN (Supports F Chassis)

Read MSV80 /MSV801 DME ISN

Read MSD80 /MSD802 DME ISN

Read MSD81 /MSD812 DME ISN

Read MSD851 DME ISN (Currently supports E chassis)

Read MEV1722 DME ISN (Supports E chassis)

Read N62_TUE2 DME ISN (Supports E chassis)

Read MEV9N46 DME ISN (Supports E chassis)

Read MEV9N46L DME ISN (Supports E chassis)

Read MSV70 DME ISN (Supports E chassis)

Read MSS60 DME ISN (Supports E chassis)





DME ISN

OBD/CAN Mode Read/Write ISN

Open DME shell to Read/Write ISN

Read B38 ISN by opening DME shell

OBD Read B48 DME ISN
(Supports F Chassis)



OBD Mode Read/Write ISN

Read/Write N55 DME ISN
(Supports F Chassis)

Help

Read/Write N20 DME ISN
(Supports F Chassis)

Help

Read/Write N13 DME ISN
(Supports F Chassis)

Help

Read/Write S63TU DME ISN
(Supports F Chassis)

Help

Read/Write N63TU DME ISN
(Supports F Chassis)

Help

Read MSV80/MSV801 DME ISN

Help

Read MSD80/MSD802 DME ISN

Help

Read MSD81/MSD812 DME ISN

Help

Read MSD851 DME ISN
(Currently supports F Chassis)

Help

< OBD Mode Read/Write...

Read/Write N20/N13/N55 DME ISN

Read MSV80/MSV801 DME ISN | [Help](#)

Read MSD80/MSD802 DME ISN | [Help](#)

Read MSD81/MSD812 DME ISN | [Help](#)

Read MSD851 DME ISN
(Currently supports E Chassis) | [Help](#)

Read MEV1722 DME ISN | [Help](#)

2. Open DME shell to read /write ISN:

1) E series

DDE70_EDC17C06

DDE701—EDC17C50

DDE71_EDC17CP02

DDE721—EDC17C41

DDE73_EDC17CP09

DDE731—EDC17CP45

MEVD17(N55)

MEVD1724(N20)

MEVD1726(N55)

MEVD1729(N20)

MSV80

MSD80

MSD81

MSD85



2) F series

DDE701A

DDE701P

DDE721B

DDE721P

DDE73A

DDE731A

DDE741A

DDE751A

MEVD172(N55)

MEVD1726(N55)

MEVD1724(N20)

MEVD1725(N13)

MEVD172G(N55)

MEVD172S(N55)

MEVD172P(N20)

MEVD1728(S63)

MEVD1729(N20)

MSD85

MSD85HY

MSD87

MSV90

3) R series

MEV1722

MED172

DDE701_EDC17C50

MEVD1727

4) M series

BMSX

3. **Read B38 ISN by opening DME shell.**

Reading ISN

Read EEPROM

Write EEPROM

Open HEX Editor



4. OBD Read B48 DME ISN (Support F chassis).

OBD detect

Backup coding

Read ISN

Restore coding



[Yanhua Mini ACDP](#) has a frequent update, so more and more will be added without any doubt.

Enjoy.