


CG-PRO programs Jaguar Land rover KVM key help file

Part 1: Read out the data from smart computer and IMMO box.

1. Dismantle the smart computer and the IMMO box from the car.





Image 1: BCM immo box

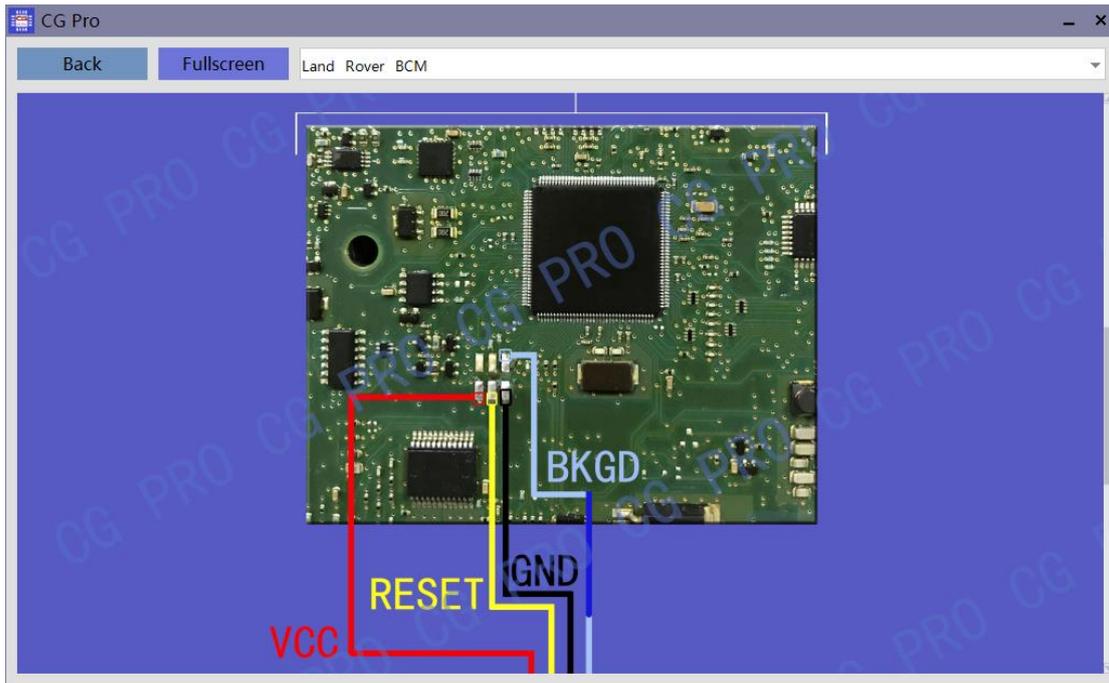

BCM physical wiring





Land Rover RFA 2m53J 9S12XET256 wiring diagram in the **CG Pro** software.

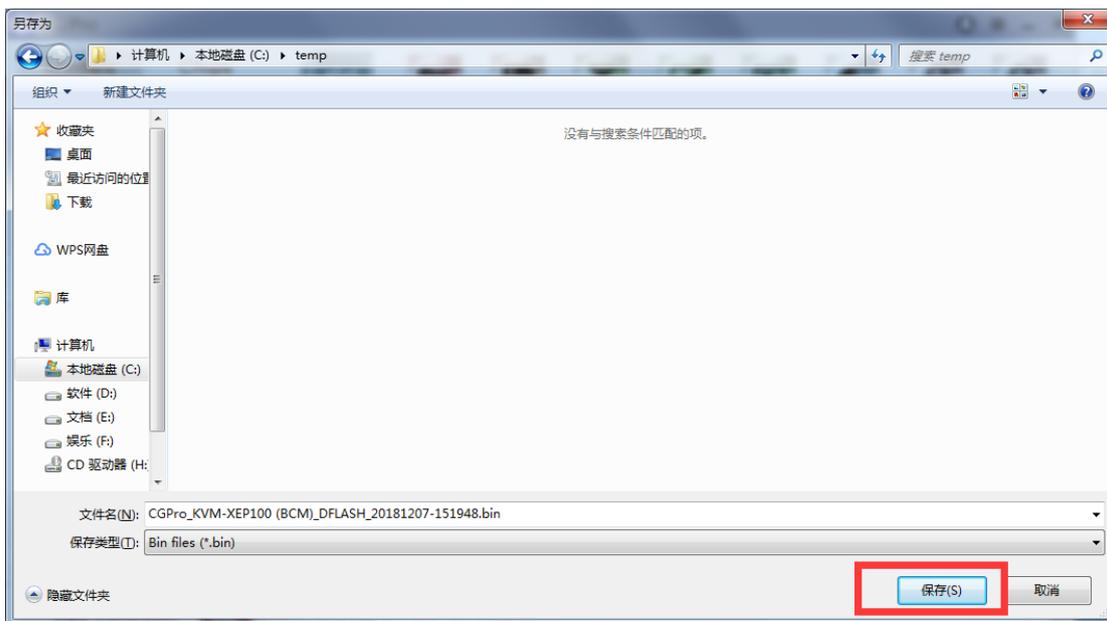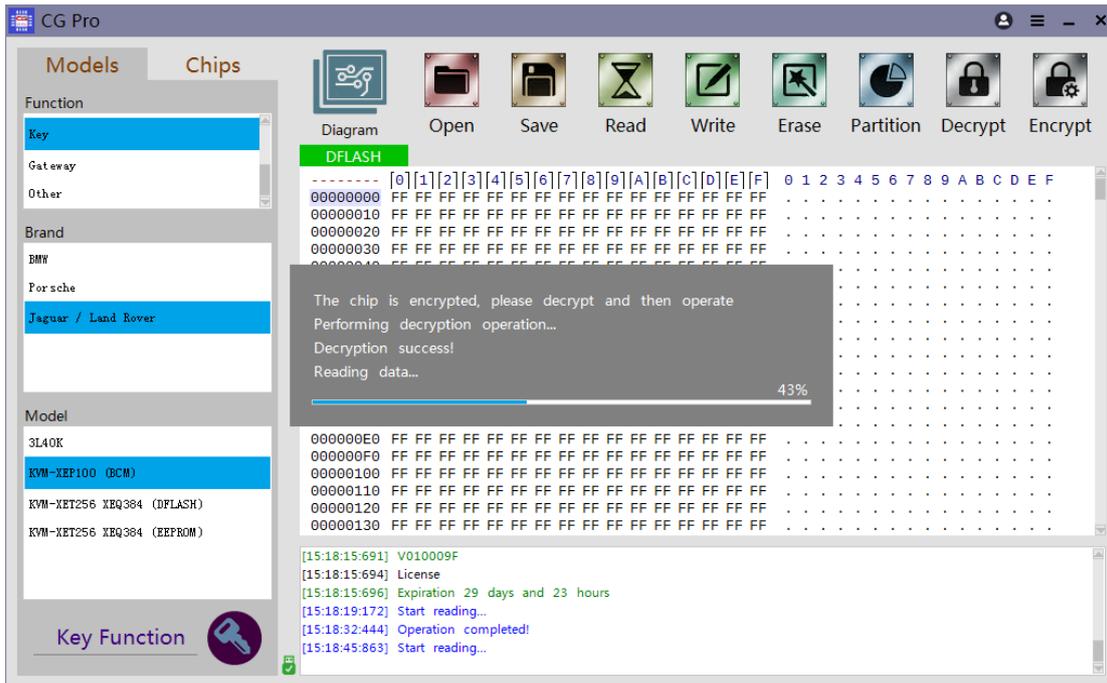

Tip: after the data is read out, do not unplug the cable and adapters immediately, because you are required to write key and then rewrite data later.

Part 2: Load the data into CG Pro software to program key

Click on "Key" - "Jaguar / Land Rover" - Model [KVM - XEP100 (BCM) for example], then click on "Key Function" to enter the key programming menu options incl. load KVM DFLASH, load KVM EEPROM, Load BCM DFLASH, Read key, Write key etc.

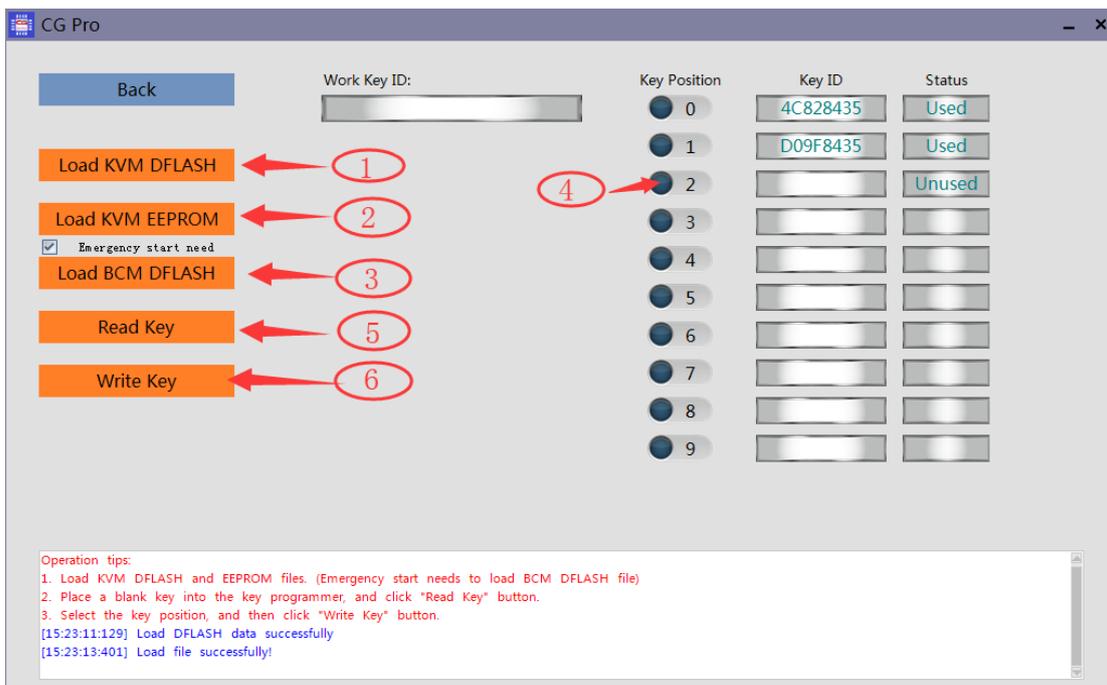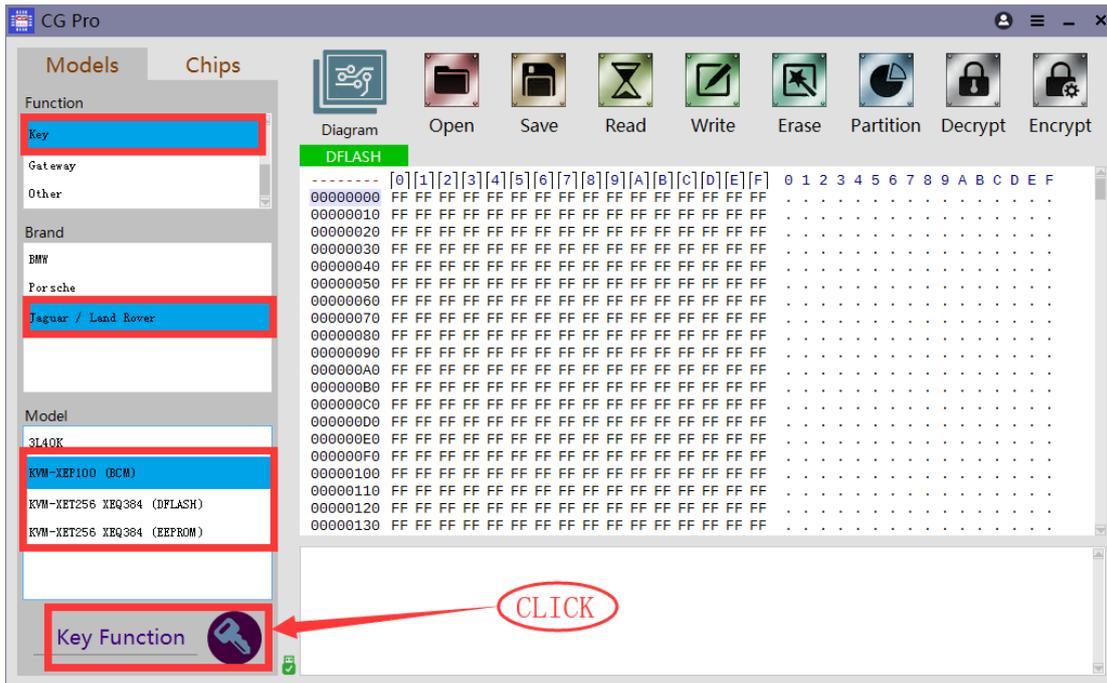

KVM Key programming tips:

Step 1: Load KVM DFLASH

Step 2: Load KVM EEPROM

This function is for emergency start (optional). If you need to operate this option, please read out the BCM immo data and meanwhile tick on this option when key is programming, then load BCM data.

Step 3: Place a blank key into the CG Pro key programmer, click on "Read key" button.

***Can read key ID and check if the key is placed correctly.

<http://www.obdexpress.co.uk>

Big thanks to CG PRO for what it can do!