


## How to Set Diagon 3 Bluetooth?


1. Plug the Bluetooth into the OBD2 diagnostic socket of the car.




2. Click "SYSTEM SETTINGS"

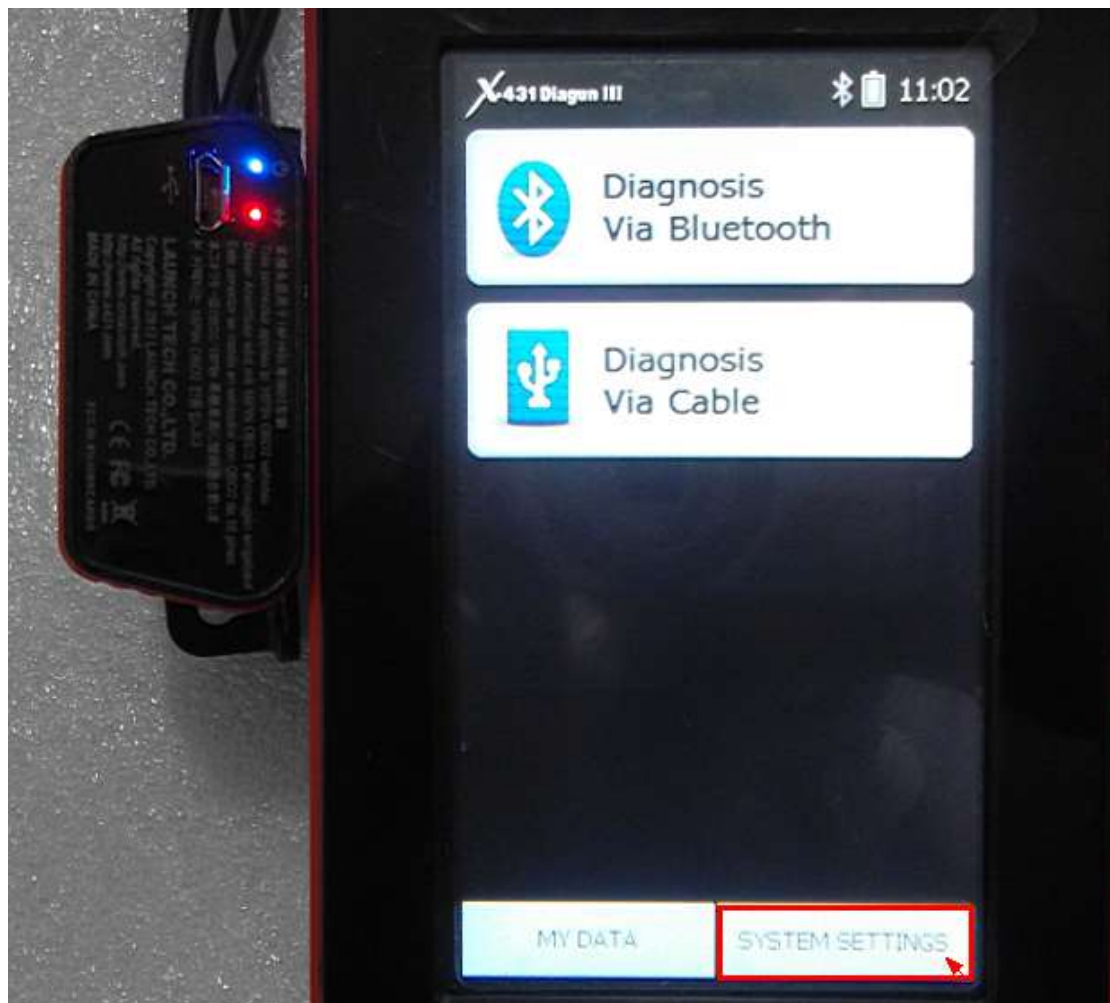


3. Click "Set Default Bluetooth"

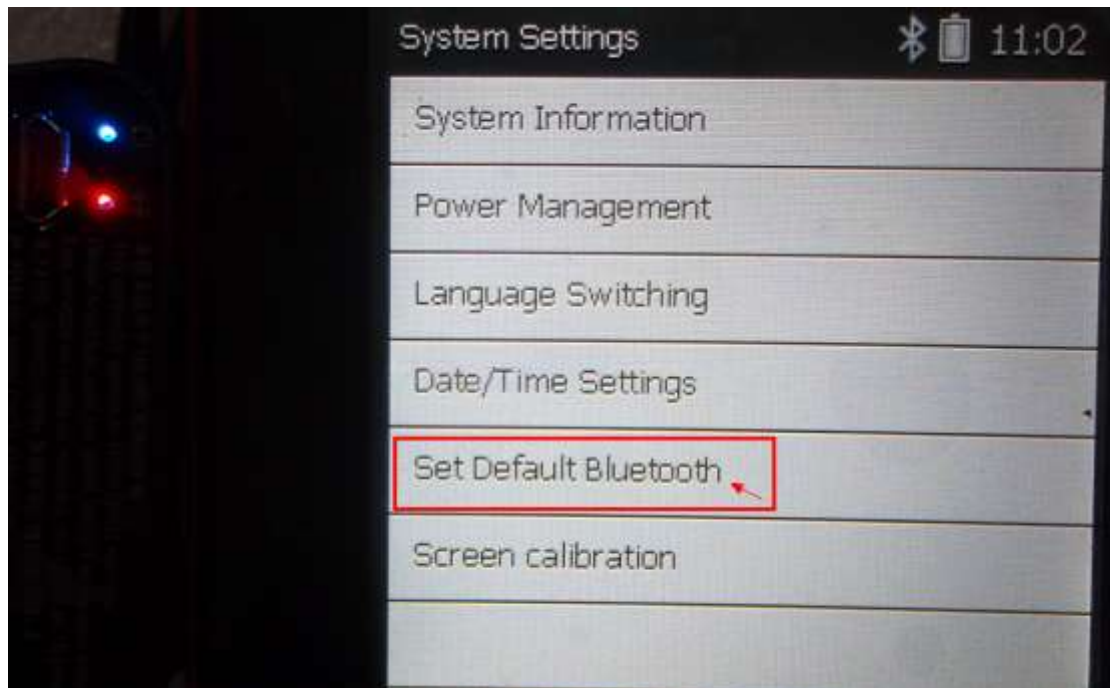


4. Searching Bluetooth

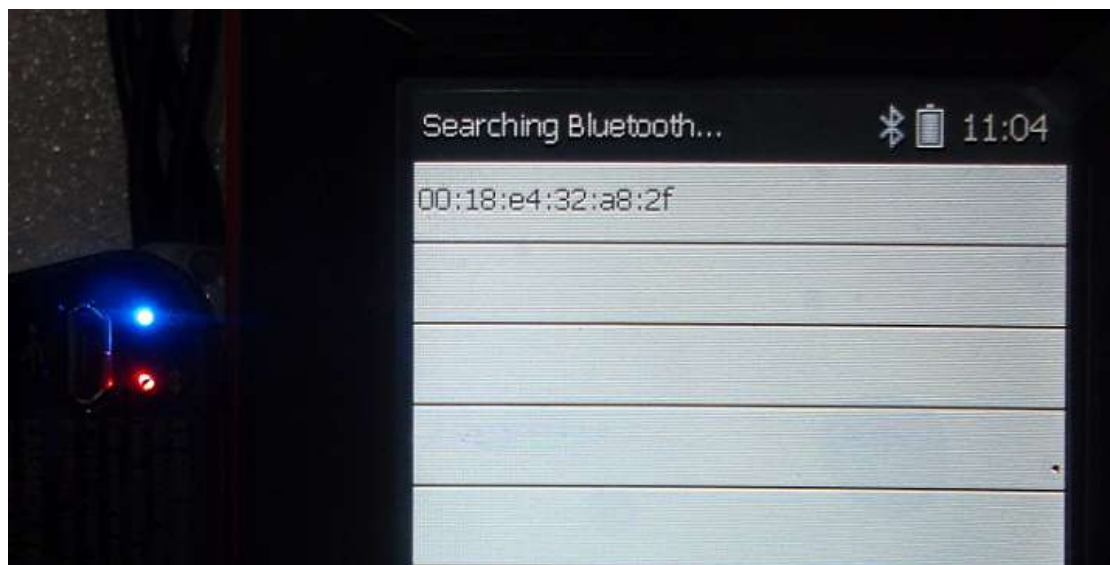


5. Bluetooth Search completed.

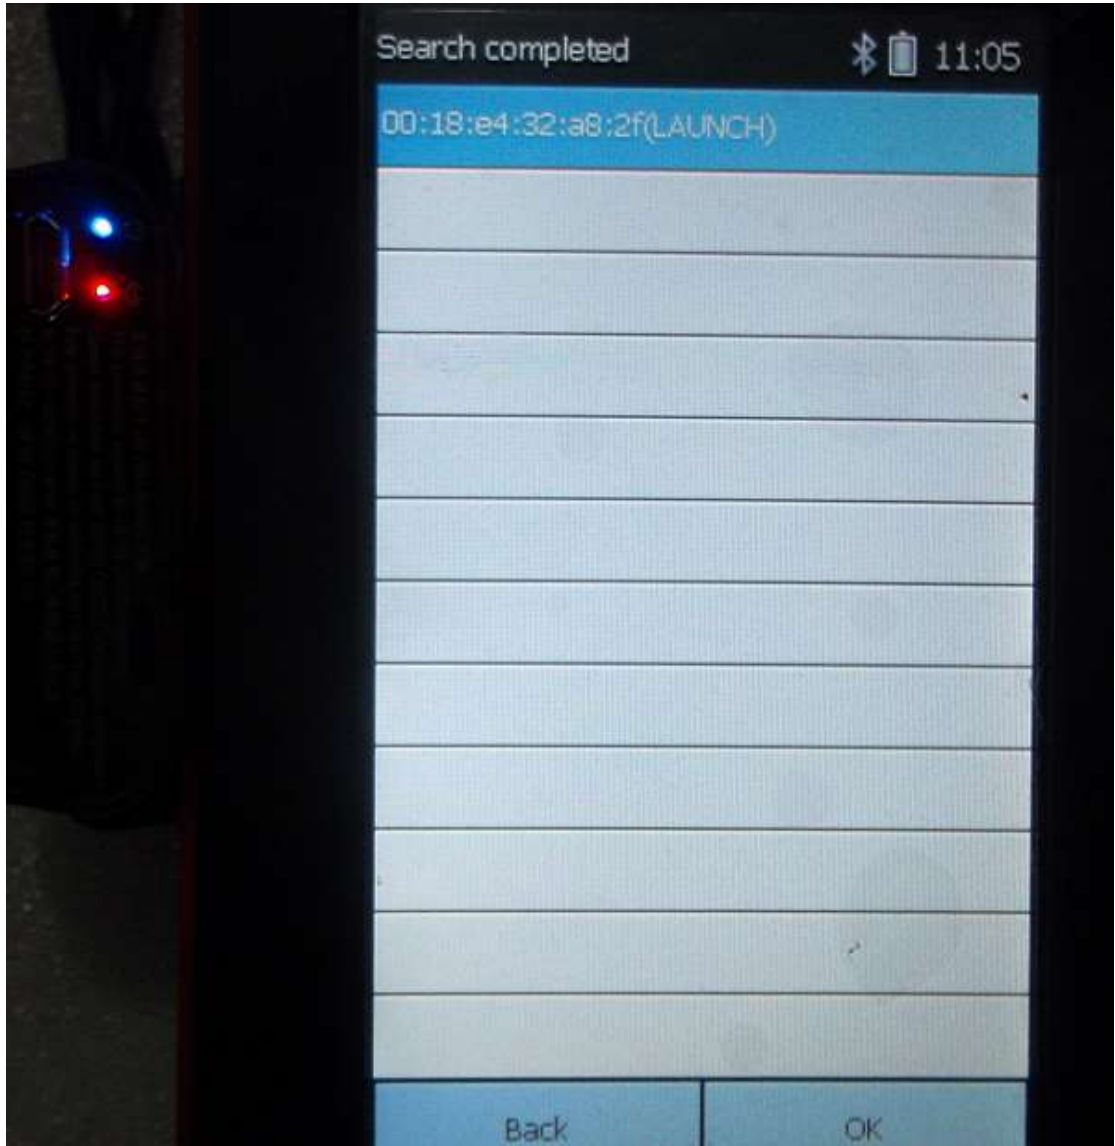

6. Succeeded to set the default Bluetooth and then click "back" to desktop

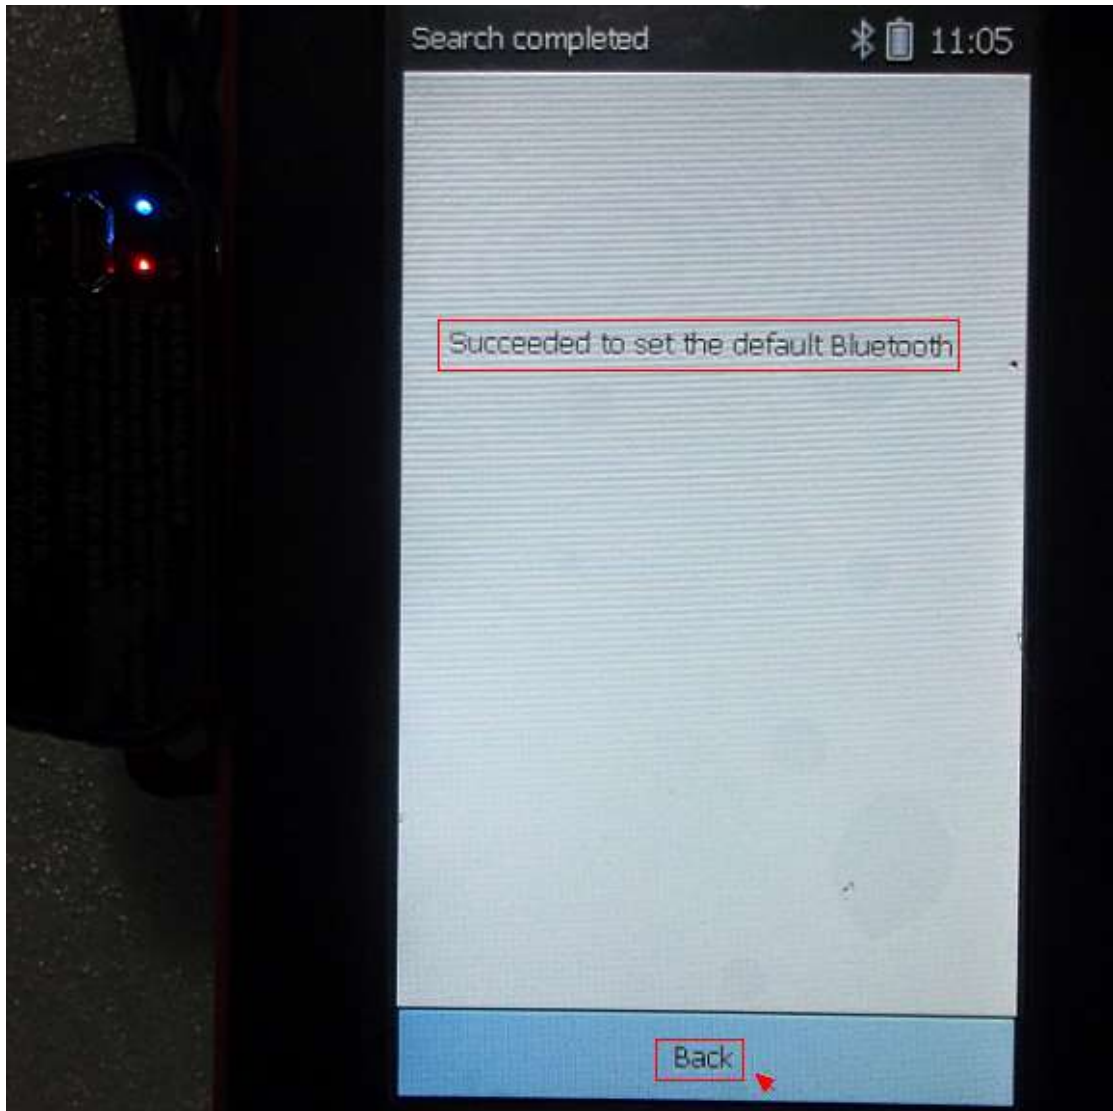

7. Click "Diagnosis Via Bluetooth"

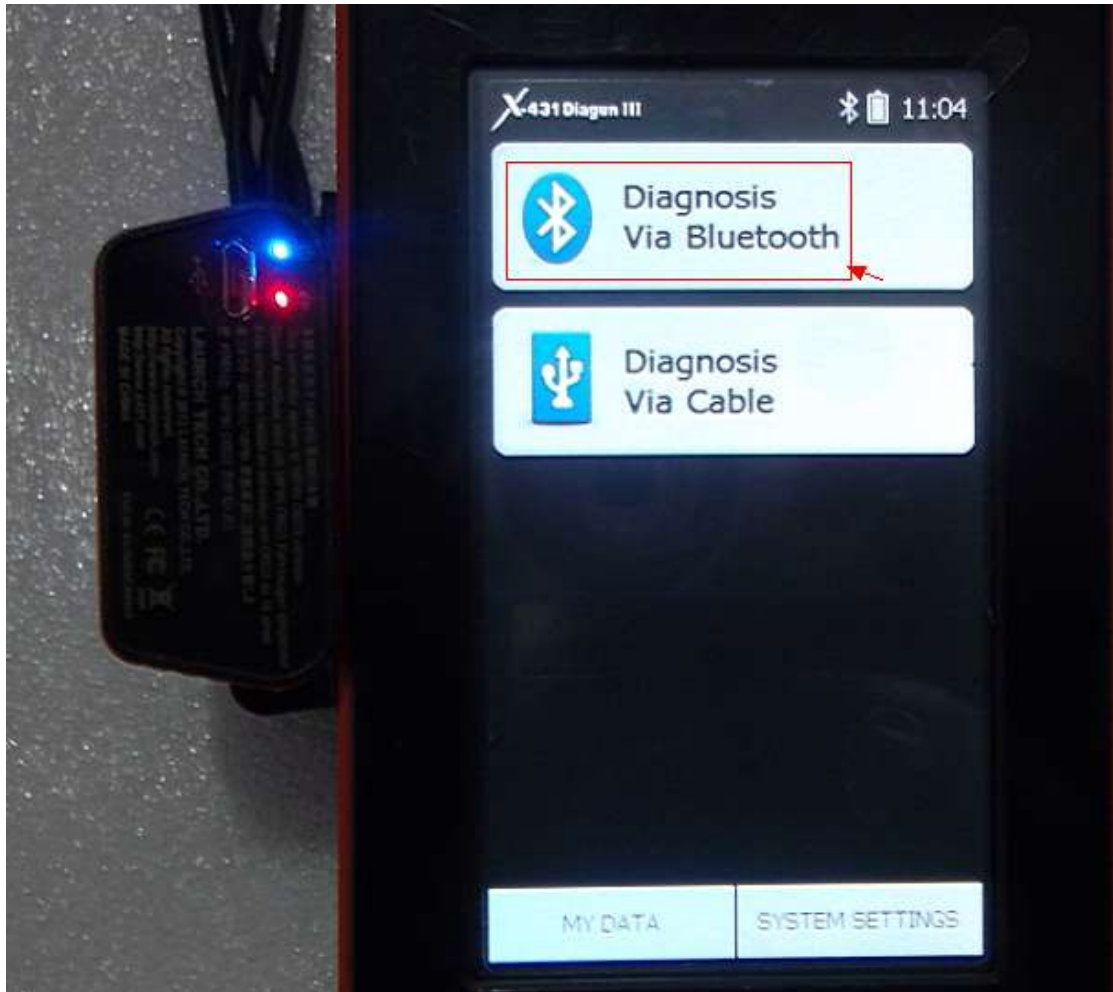


8. Select Vehicle you want to diagnose.






9. Choose the diagnostic software Version.

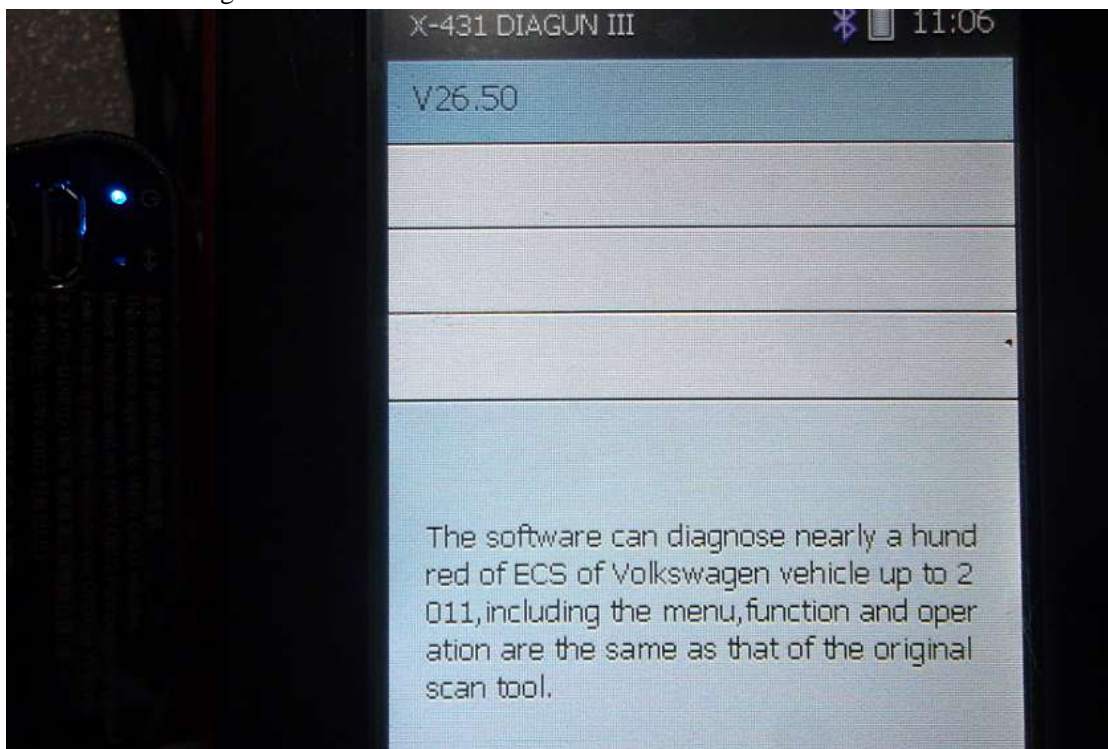

10. Proceed to diagnostic information identification: Hardware version number, Download version NO, S/N and Boot version No.

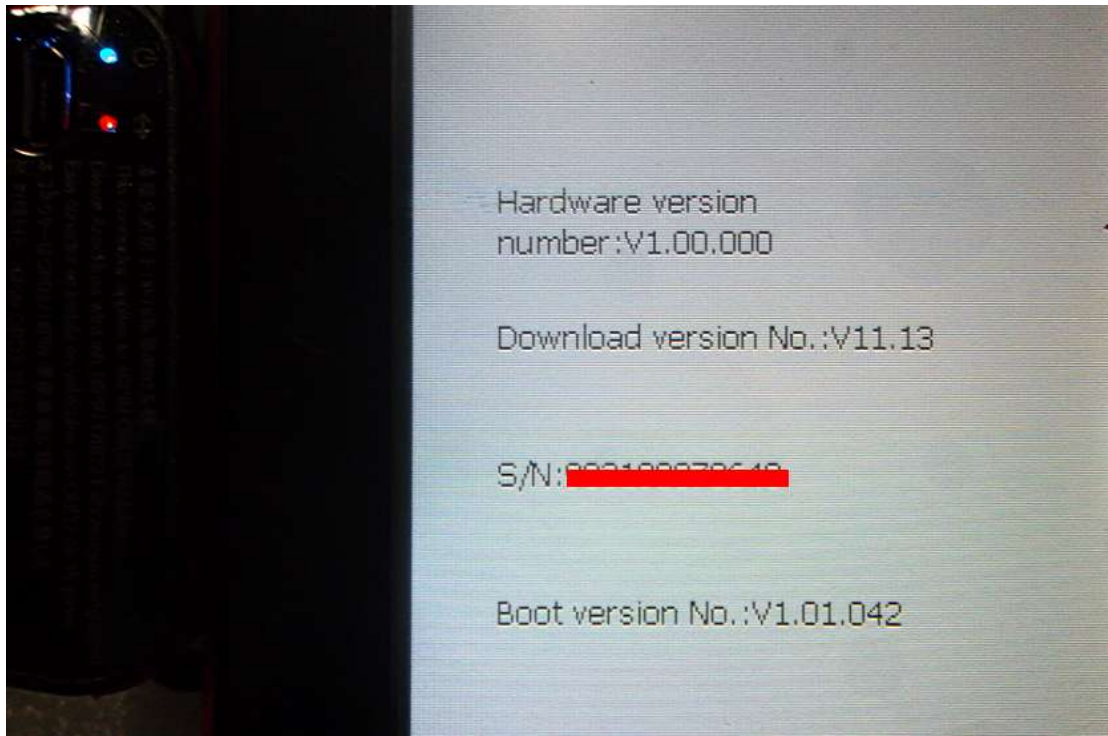

11. The following picture shows the diagnostic result, including: trouble code, description and state.

Trouble Code	Description	State
16885	P0501 Vehicle speed sensor A:range/performance	
17978	P1570 Engine control module disabled	
16556	P0172 system too rich bank 1	sporadic:
16514	P0130 O2 Sensor circuit,Bank 1-sensor 1:Malfunction	sporadic:
17564	P1156 Manifold absolute pressure (MAP) sensor circuit-G71:open/short to ground	
Prev		More