

Toyota RAV4


Support more models

Toyota Corolla, Camry, Prado, Levin etc.,


VVDI



KEY TOOL MAX & MINI OBD

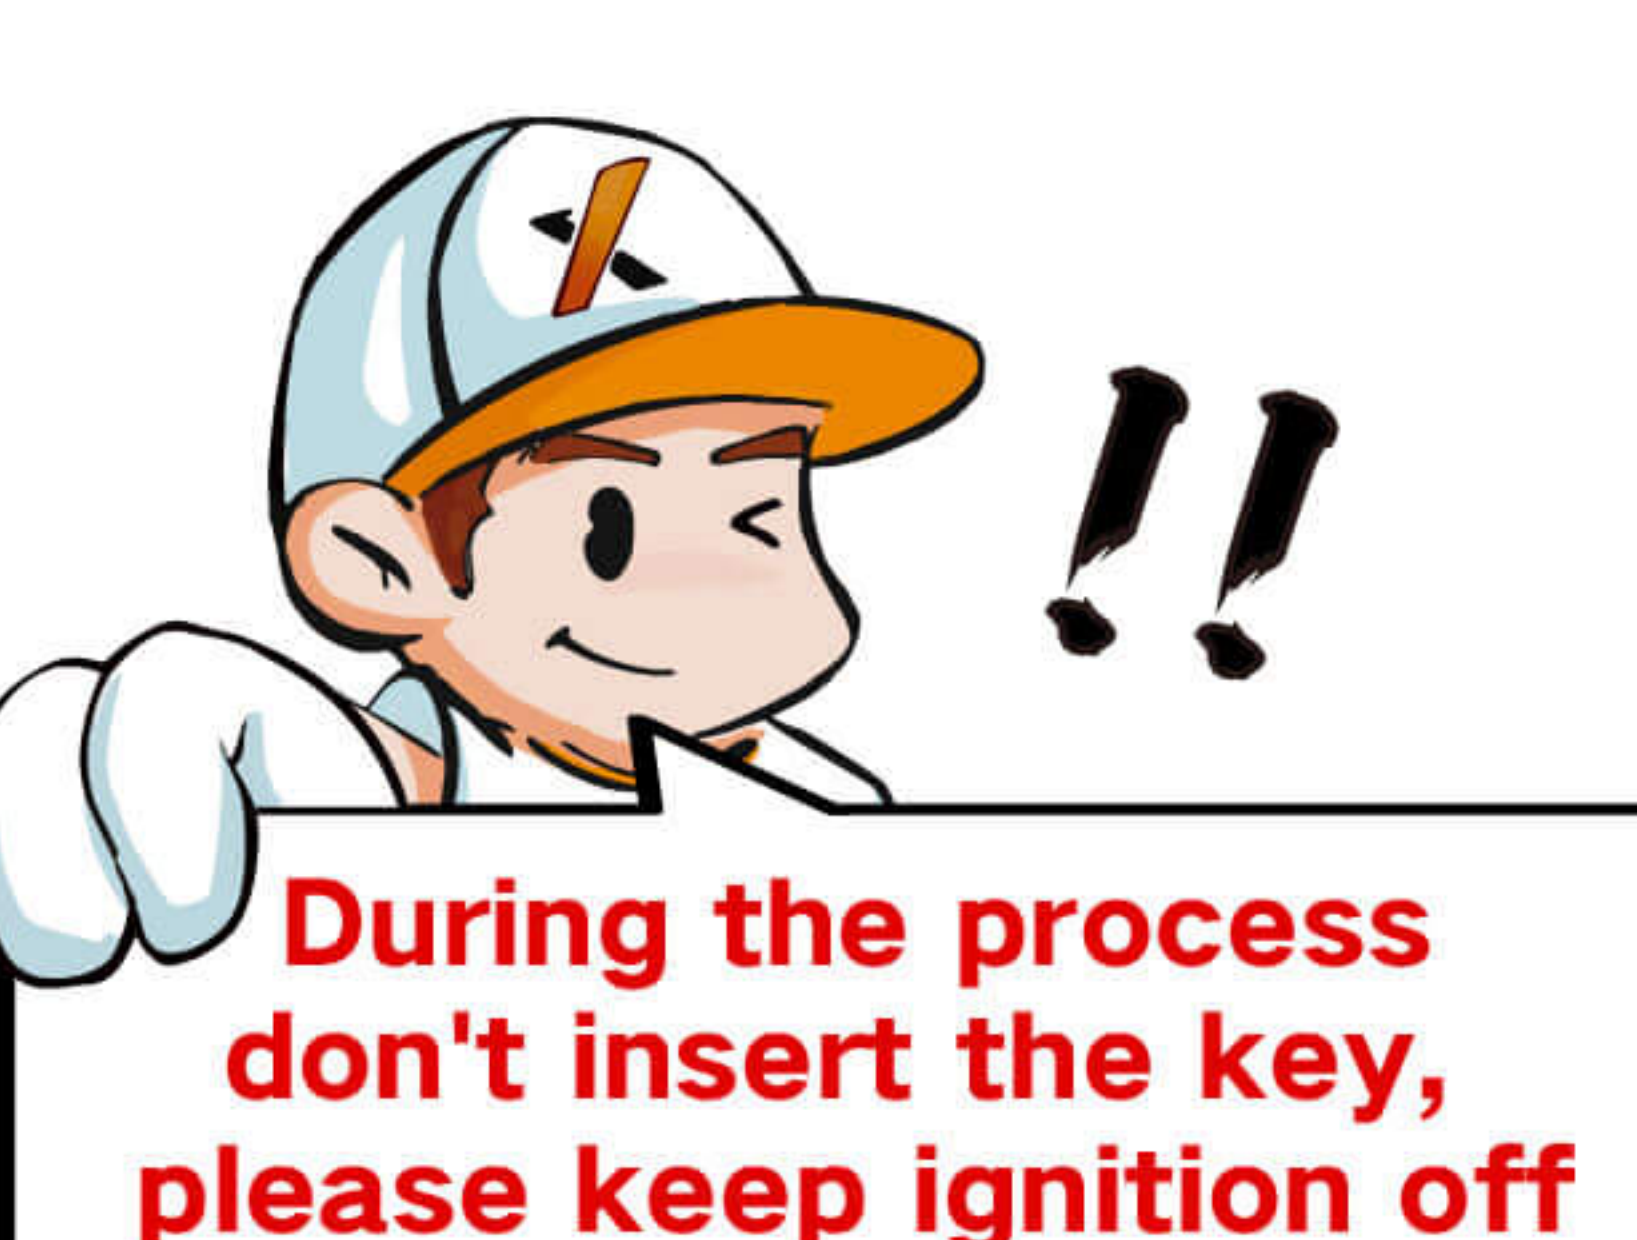


Ⓢ Please update device to latest version for this function

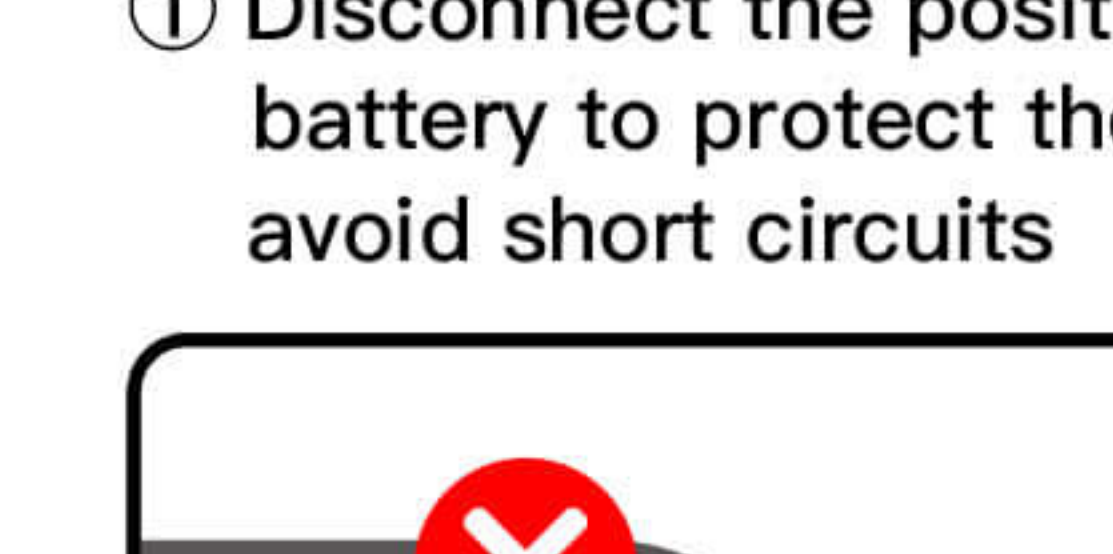

During the process don't insert the key, please keep ignition off

① Disconnect the positive pole of the car battery to protect the connector and avoid short circuits

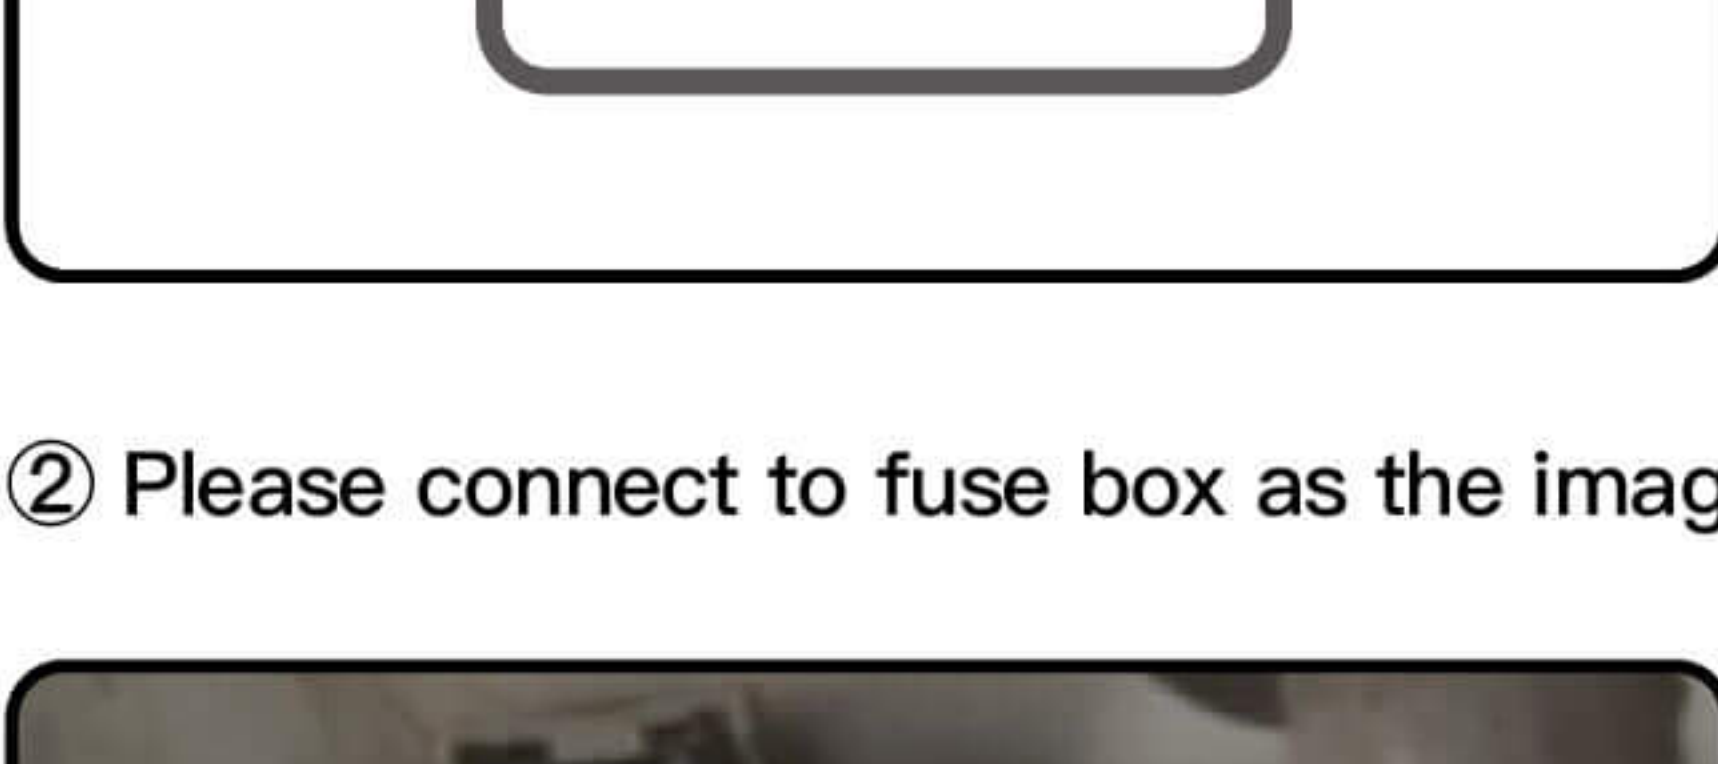


② Please connect to fuse box as the image




J3 lock plug

③ Please connect the ELV wires as shown

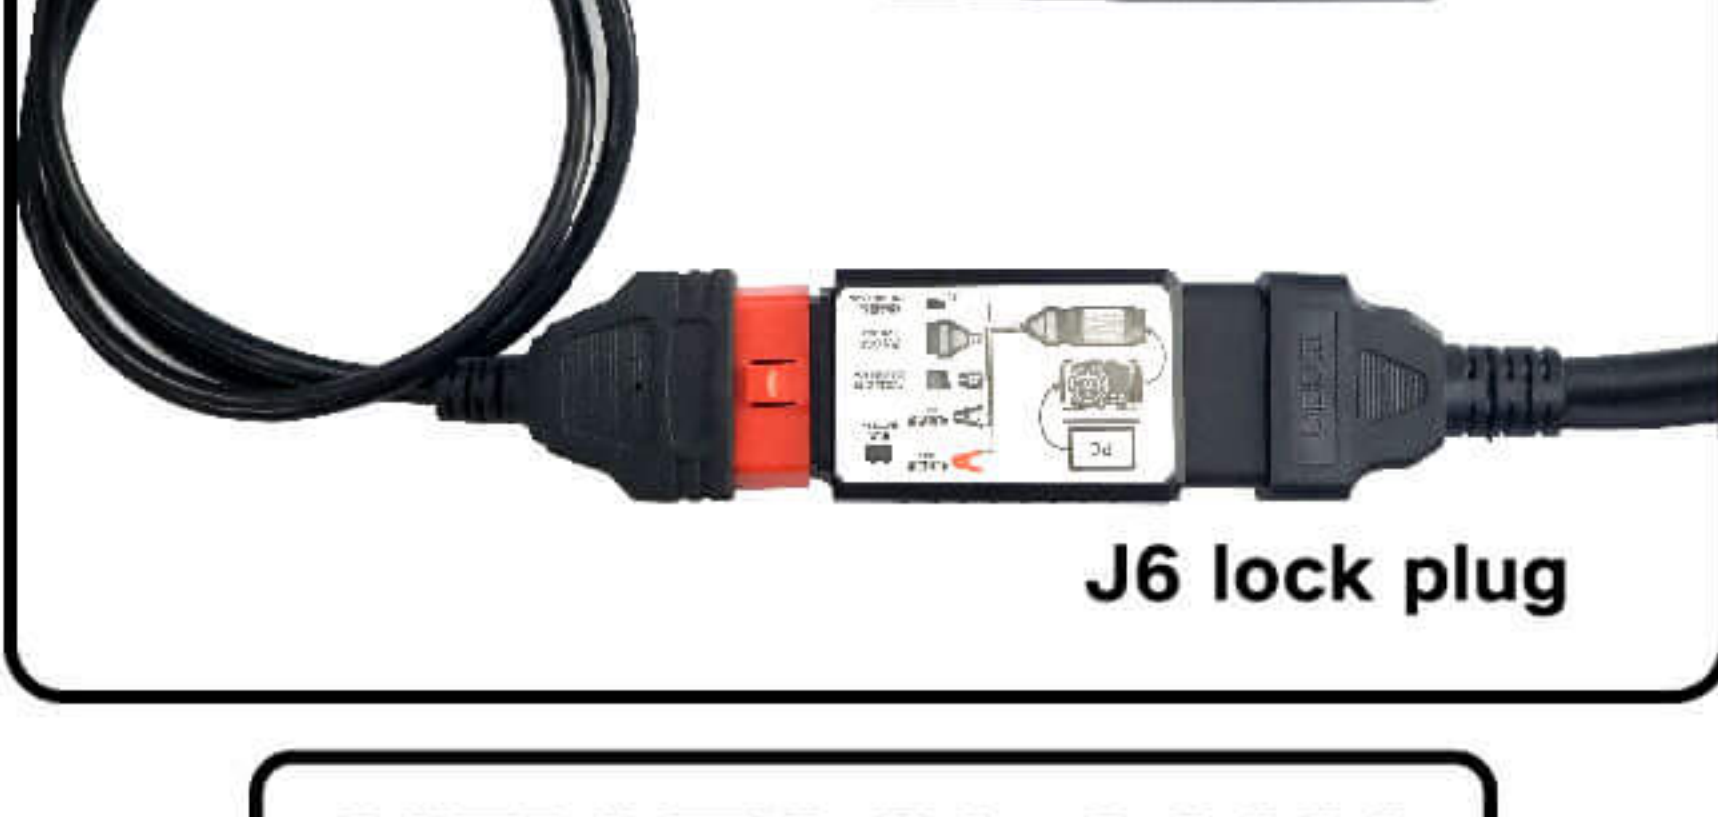


J5 lock plug

④ Please connect to car OBD, all key lost cables and car battery

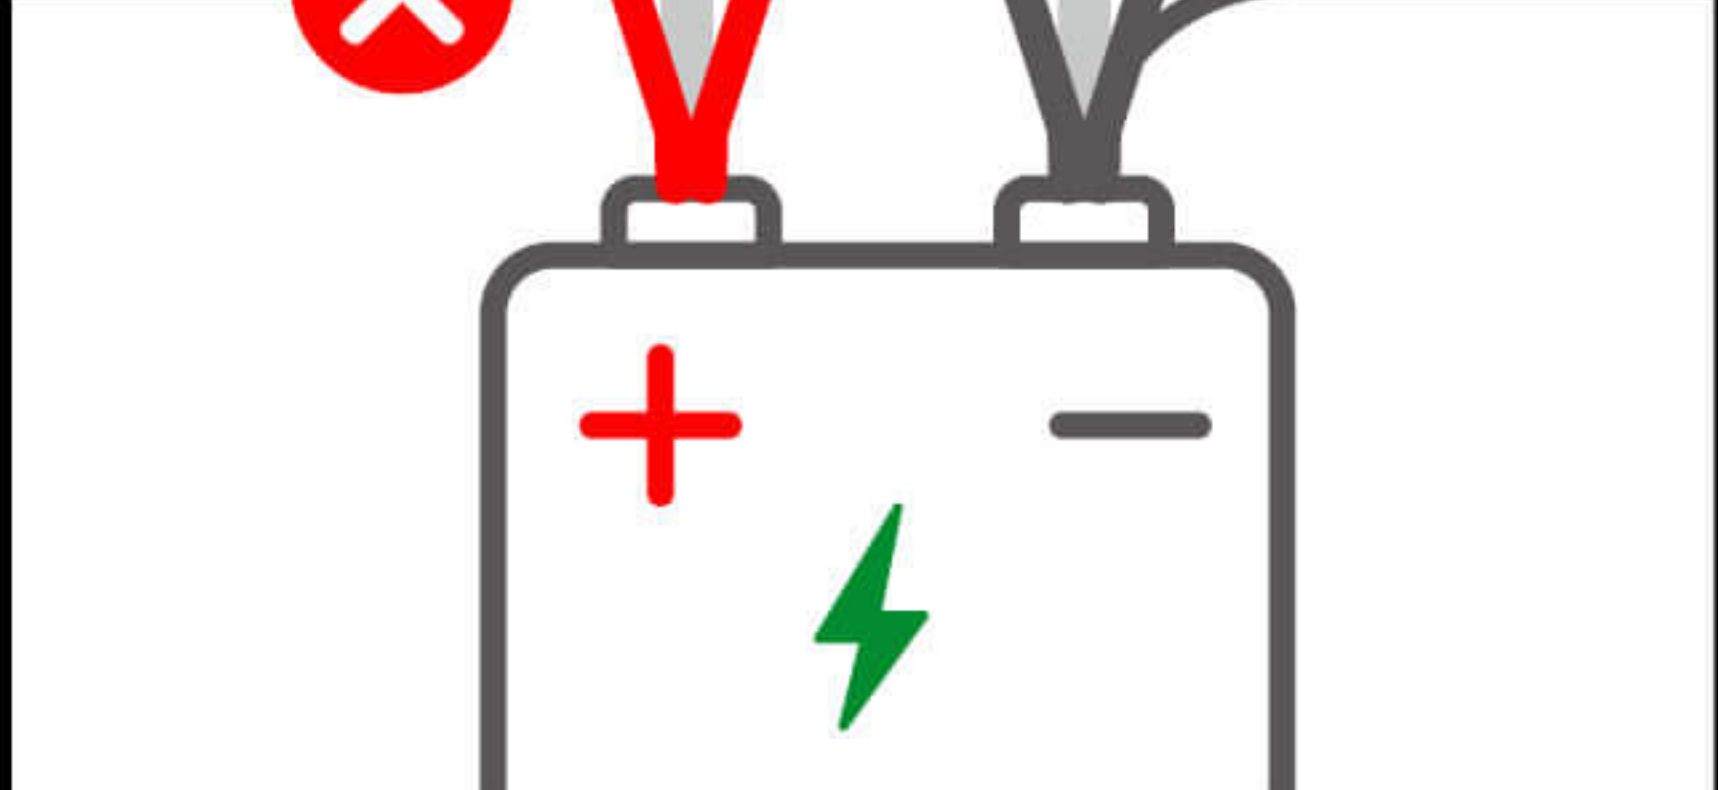


J4 lock plug

VVDI

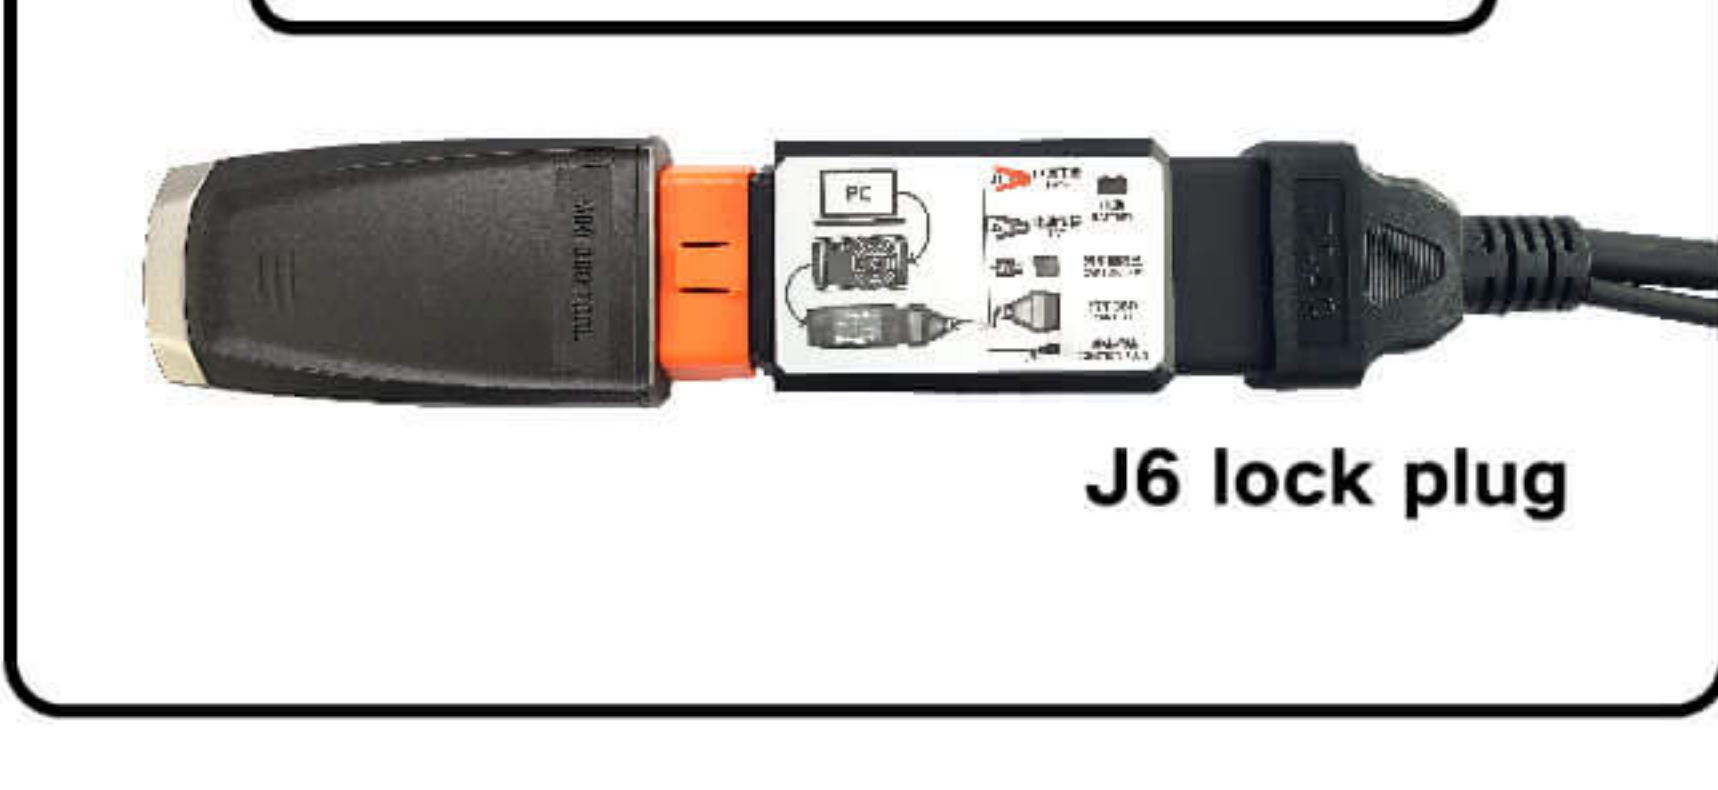


J6 lock plug

KEY TOOL MAX & MINI OBD

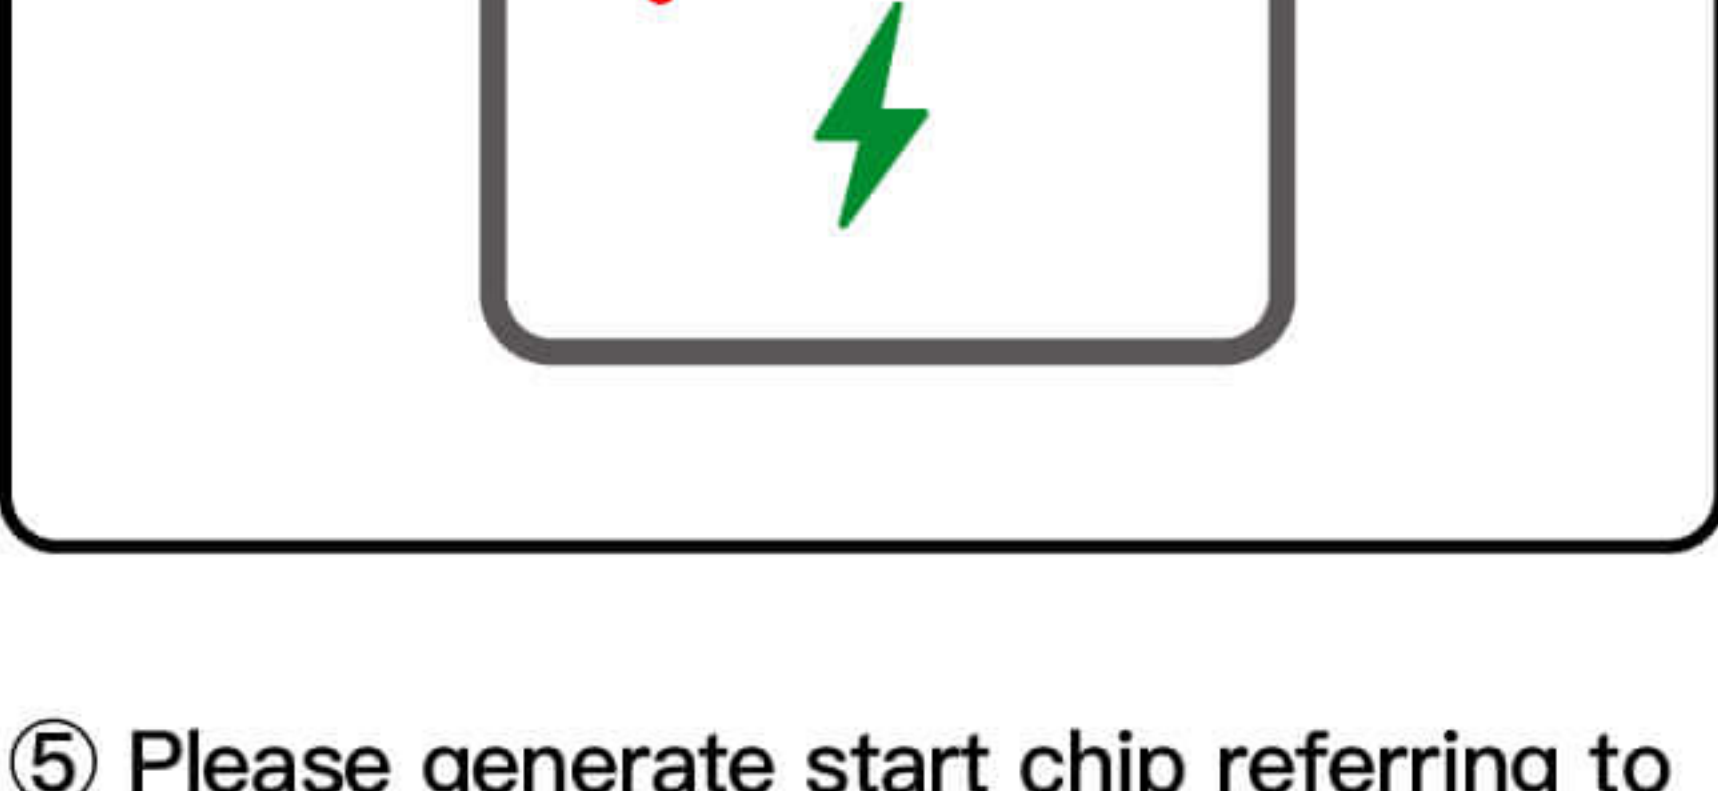


J6 lock plug

⑤ Please generate start chip referring to software interface

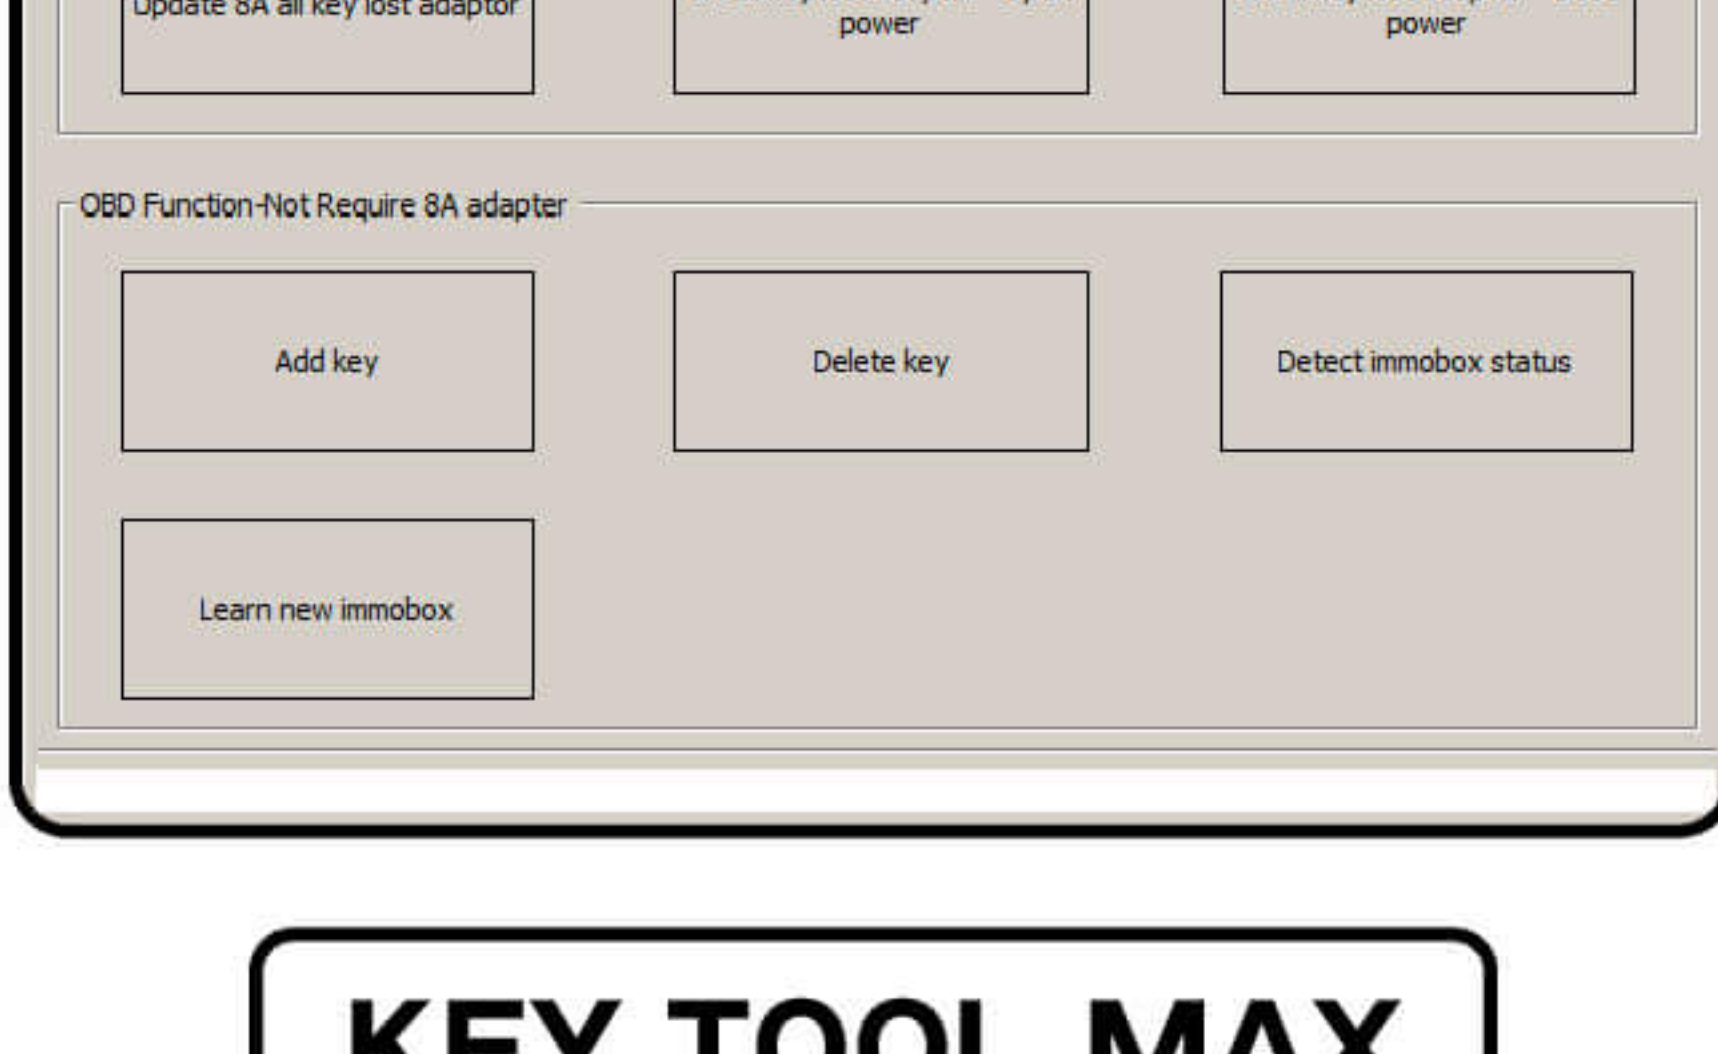

KEY TOOL MAX & MINI OBD

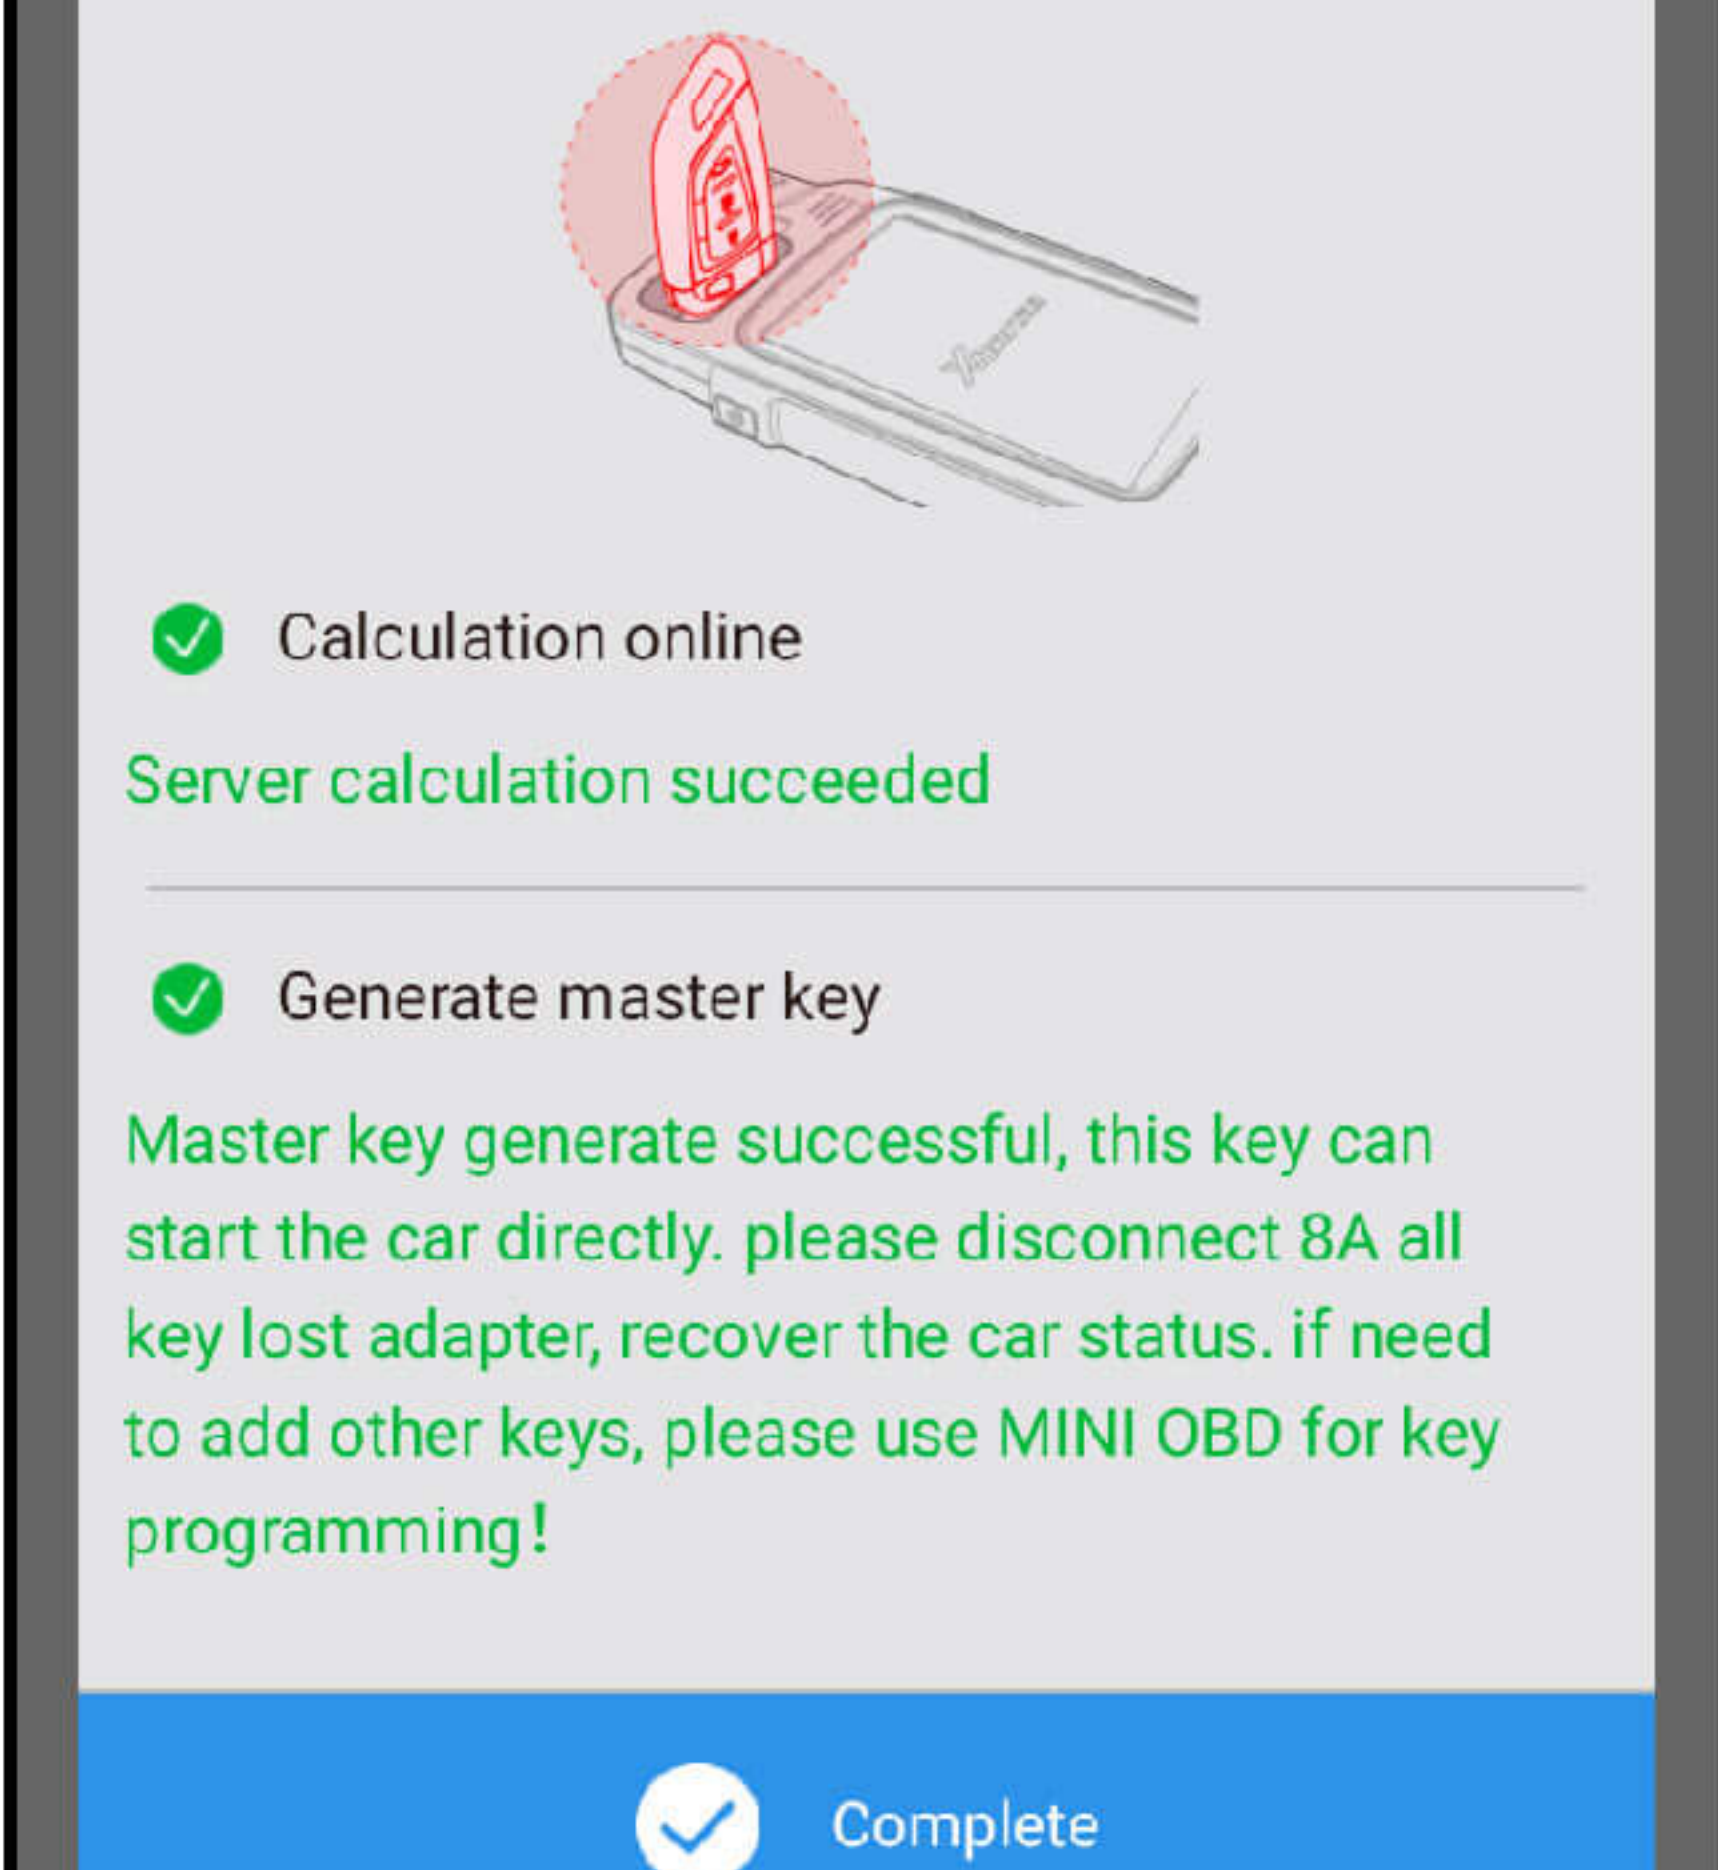

⑥ Please disconnect all cables, recover all connection wires as car original status

If the connection wires not recovery to original status and start the car directly, the fuse box and device will be burnt



⑦ Test generated transponder